




EXIT DEVICE

REVERSIBLE RIM TYPE


SERIES #203836

INSTALLATION INSTRUCTION


Customer Service: 1-800-558-8700

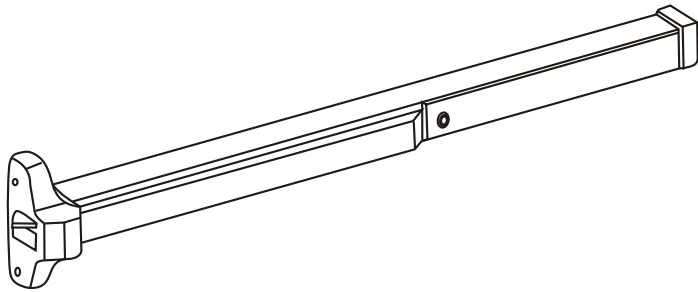


A. IDENTIFICATION OF PARTS

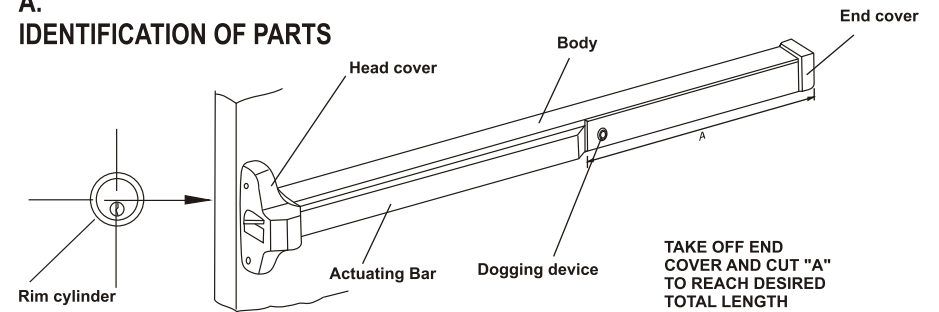


B. TYPE OF INSTALLATION

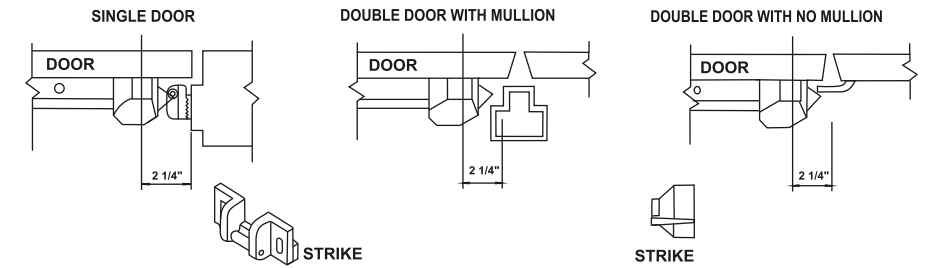


C. Exterior Knob Installation

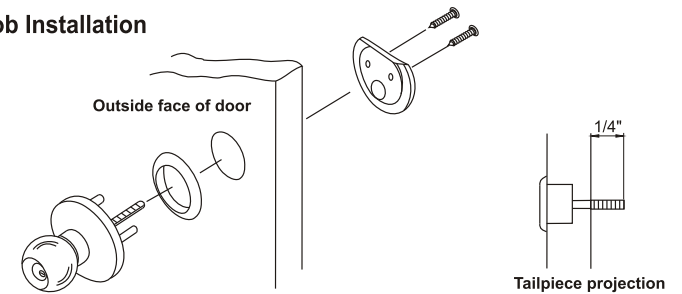

D. INSTALL BODY

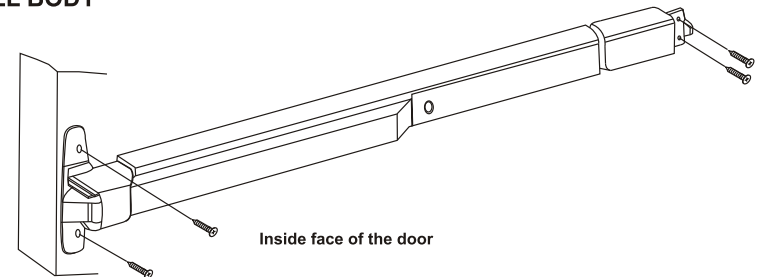


E.
PUT ON BOTH HEAD AND END COVER

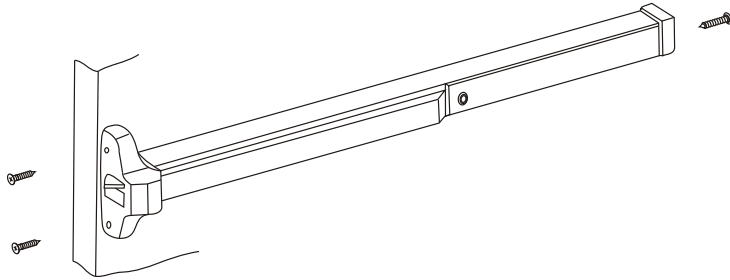

F.
NOTICE

TO EXTEND THE LIFE OF THIS EXIT DEVICE,
 LOCK THE LATCH AS RETRACTED WHEN DOOR
 IS IN CONTINUOUS ACTIVITY.

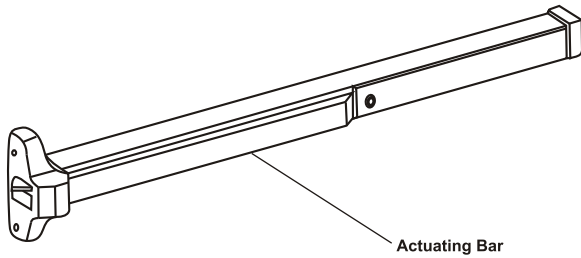

TO LOCK : Hold actuating bar down, turn dogging device counter-clockwise.
 TO UNLOCK : hold actuating bar down, turn dogging device clockwise.

